



Air Hawk T.M.

June 18, 2013

PART: 1023MF

**2014 Silverado 1500
(Front Mudflap) (new body style)**

DRIVER SIDE IS SHOWN

DESIGN REGISTERED


INSTALLATION INSTRUCTIONS

- (1) Please check for complete hardware contents in kit according to parts list.
- (2) Remove the two 8mm factory screws, add provided washers to the factory screws, and attach mud flap to truck, do not tighten screws until all screws are and flap is lined up..
- (3) Install #12 x 1 3/8 SD Tek Screw c/w washer
- (4) Make sure that the mud flap is straight & level, tighten both factory screws & tek screws.

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or Mud Flaps.

Use of this product is subject to Company Terms & Conditions of sale.

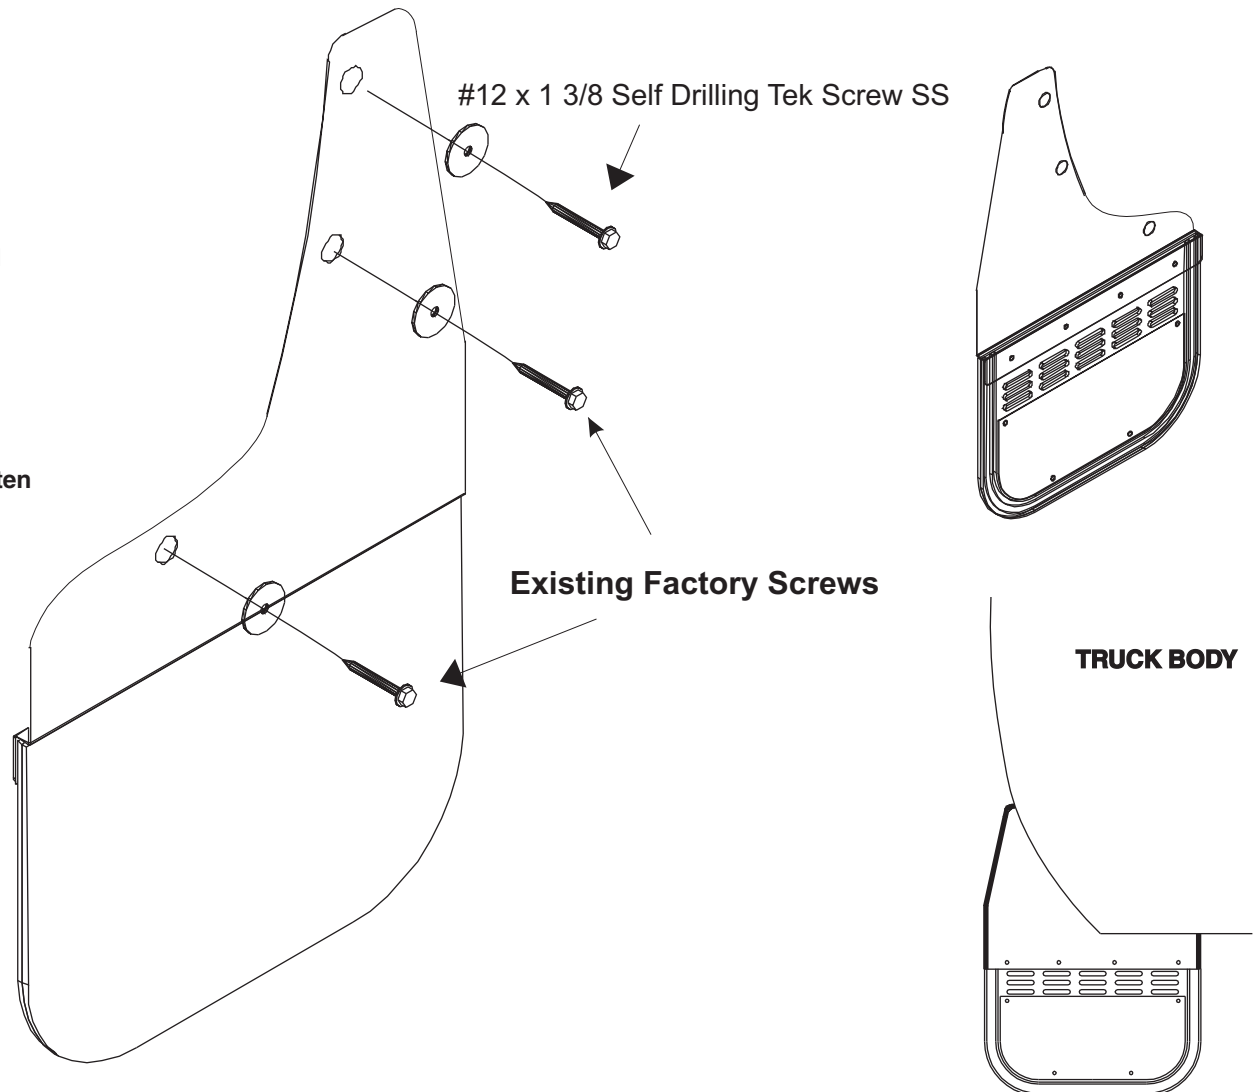

Made in Canada

PARTS LIST	
QTY	PART DESCRIPTION
2	1023MF Mud Flaps (passenger & driver side)
2	#12 x 1 3/8 Self Drilling Tek screw SS
6	#12 x 1" SS Fender Washers SS

**Rear View of Vehicle
(Installed Mud Flap)**