



Air Hawk T.M.

DESIGN REGISTERED
Jan 21, 2014 Rev:2.2

INSTALLATION INSTRUCTIONS

- (1) Please check for complete hardware contents in kit according to parts list.
- (2) Hold mud flap inside wheel well to determine which vehicle mounting bolts to use.
- (3) Remove bolts and loosely secure mud flap on vehicle mounting bolts.
- (4) Once mud flap is aligned with vehicle opening, drill additional holes if required and secure mud flap with provided hardware, being sure to tighten all bolts and screws.

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or Mud Flaps.


PARTS LIST

QTY	PART DESCRIPTION
2	2012MF Mud Flaps (passenger & driver side)
6	S.D. HEX SCREWS #10 x 3/4"
8	S.D. HEX SCREWS #10 x 1-1/2"
14	FENDER WASHER 3/16" x 1"

PART: 2012MF

**2001 - 2006 GMC Sierra HD
with flares
(Front Mud Flap)**

DRIVER SIDE IS SHOWN

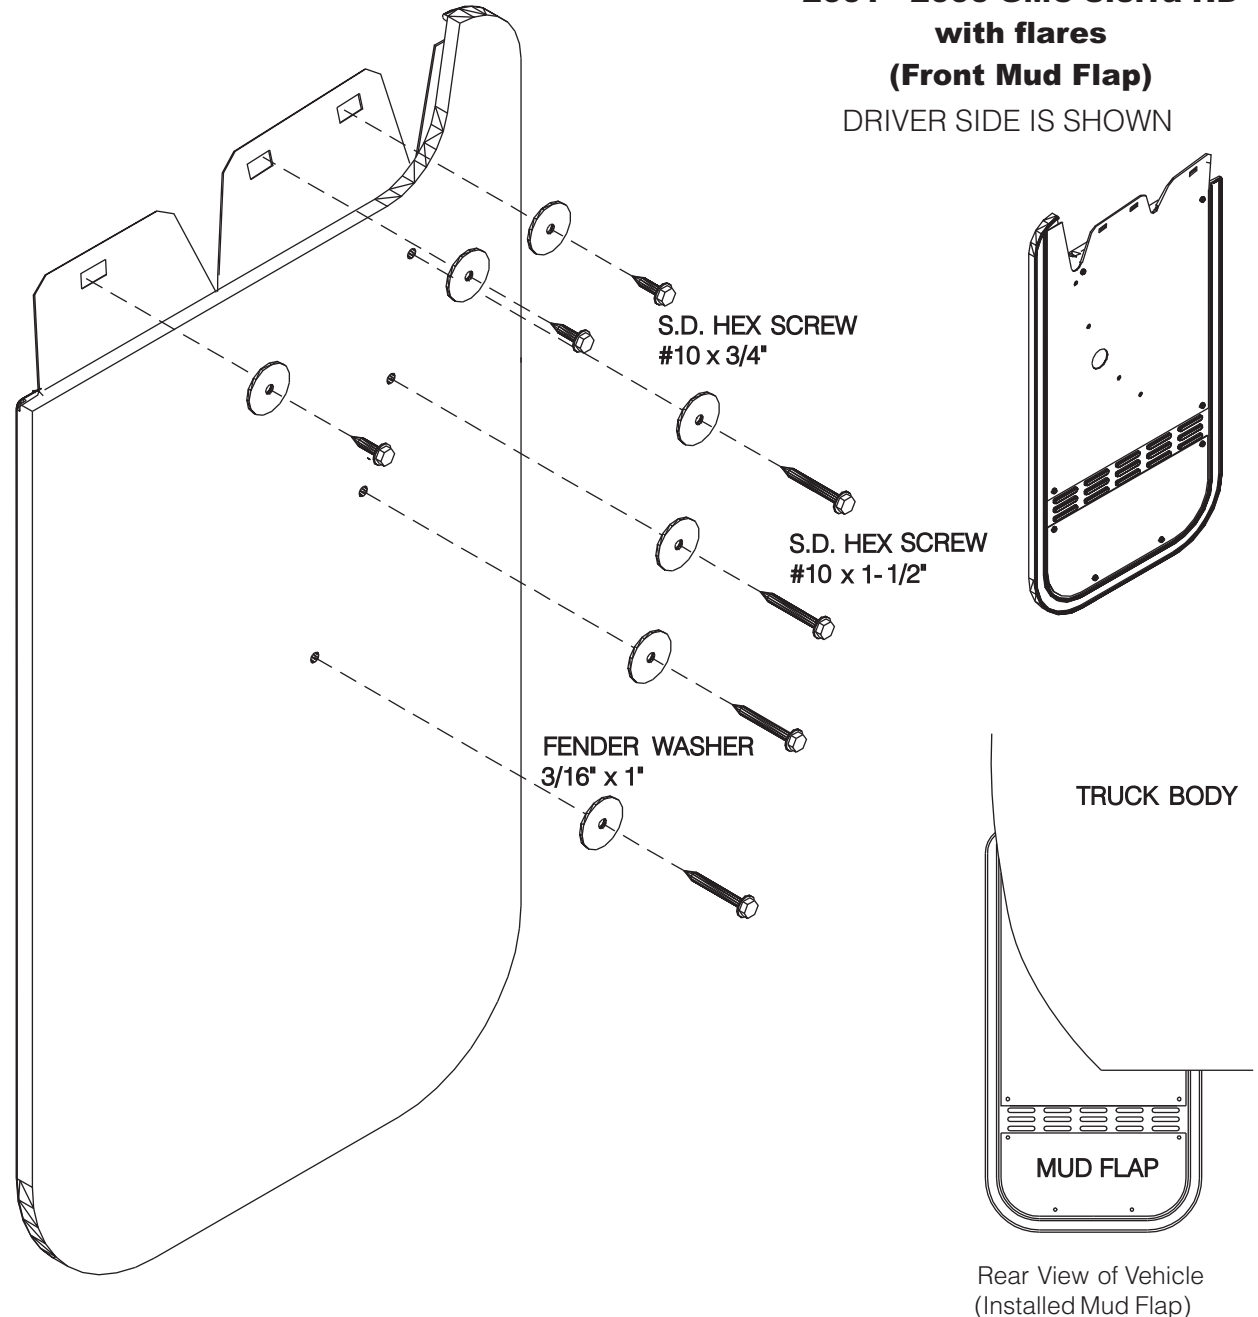

Rear View of Vehicle
(Installed Mud Flap)