



**Air Hawk** T.M.

DESIGN REGISTERED

Jan 16, 2014 Rev:1

# PART: 3020MR

**2009-2013 Dodge Ram 2500/3500**

**with or without flares  
(Rear Mud Flap)**


**DRIVER SIDE IS SHOWN**

## INSTALLATION INSTRUCTIONS

- (1) Please check for complete hardware contents in kit according to parts list.
- (2) Remove the two 8mm factory screws, add provided washers to the factory screws, and attach mud flap to truck, do not tighten screws until all screws are and flap is lined up..
- (3) Drill hole through plastic wheel well liner, insert 1/4" carriage bolt.
- (4) Make sure that the mud flap is straight & level, tighten both factory screws & carriage bolts.

### IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or Mud Flaps.

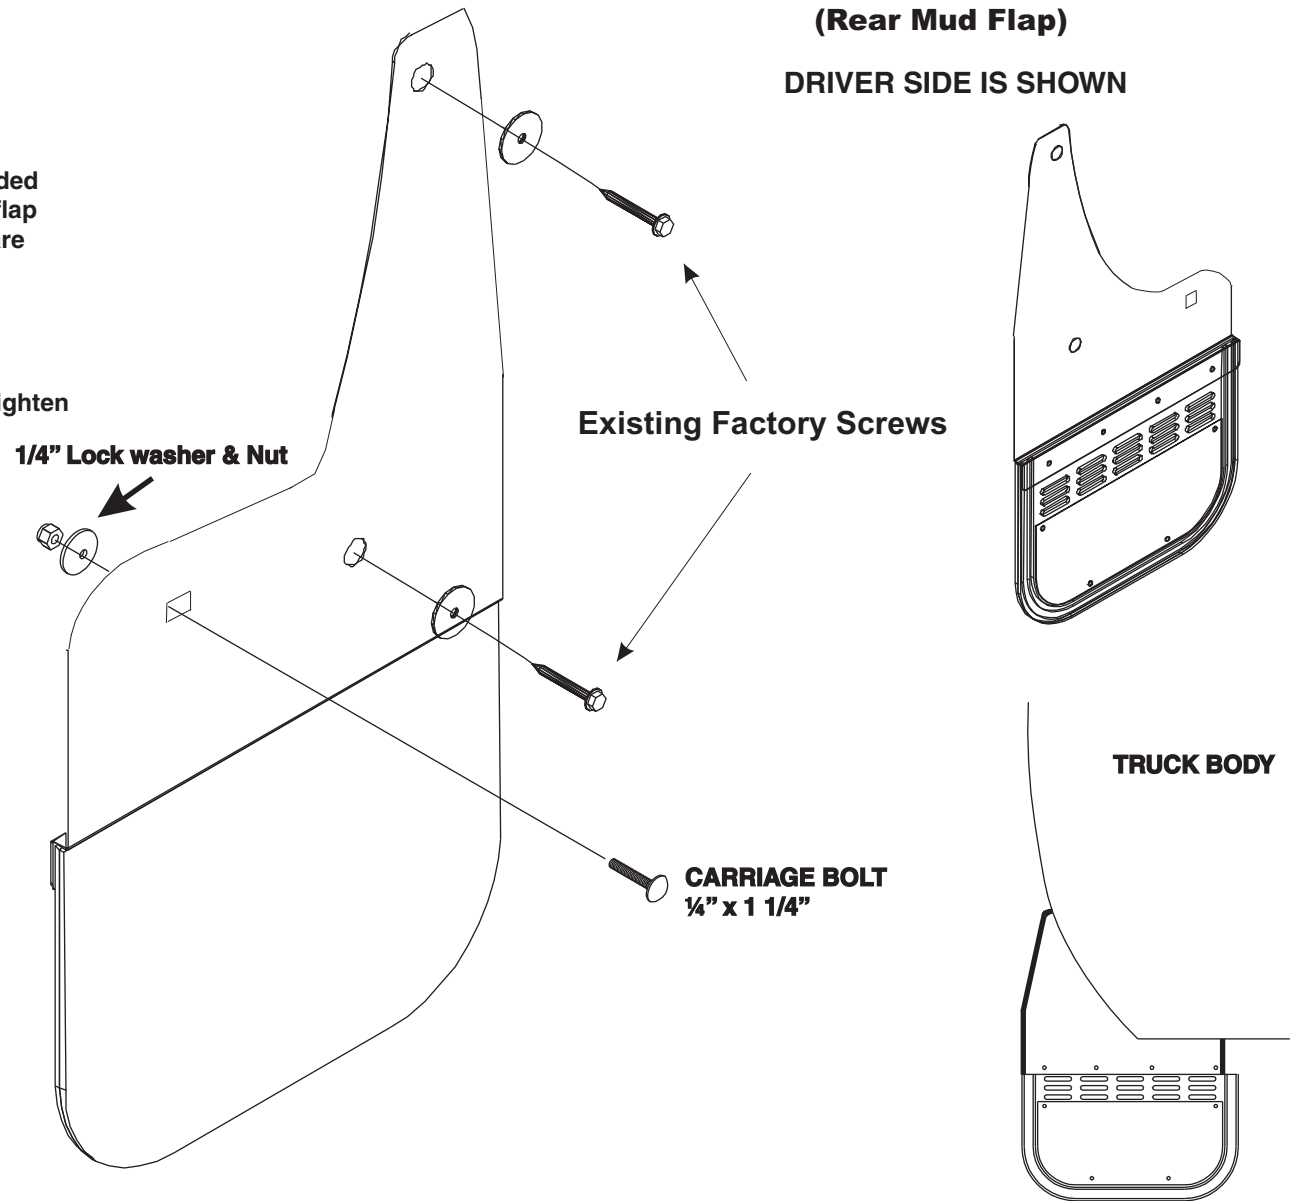

### PARTS LIST

QTY	PART DESCRIPTION
2	3020MF Mud Flaps (passenger & driver side)
4	#12 x 1" SS Fender Washers
2	1/4" x 1" SS Fender Washers
2	1/4" SS Lock Washers
2	1/4" SS Hex Nuts
2	1/4" x 1 1/4" SS Carriage Bolts.

Made in Canada

**Rear View of Vehicle  
(Installed Mud Flap)**