



**Air Hawk** T.M.

DESIGN REGISTERED  
Version 2.1 - Nov 21st 2008

# PART: 4006MF

**1999 - 2007 Ford Super Duty  
(Front Mud Flap)**


DRIVER SIDE IS SHOWN

## INSTALLATION INSTRUCTIONS

- (1) Please check for complete hardware contents in kit according to parts list.
- (2) Hold mud flap inside wheel well to determine which vehicle mounting bolts to use.
- (3) Remove bolts and loosely secure mud flap on vehicle mounting bolts.
- (4) Once mud flap is aligned with vehicle opening, drill additional holes if required and secure mud flap with provided hardware, being sure to tighten all bolts and screws.

### IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or Mud Flaps.

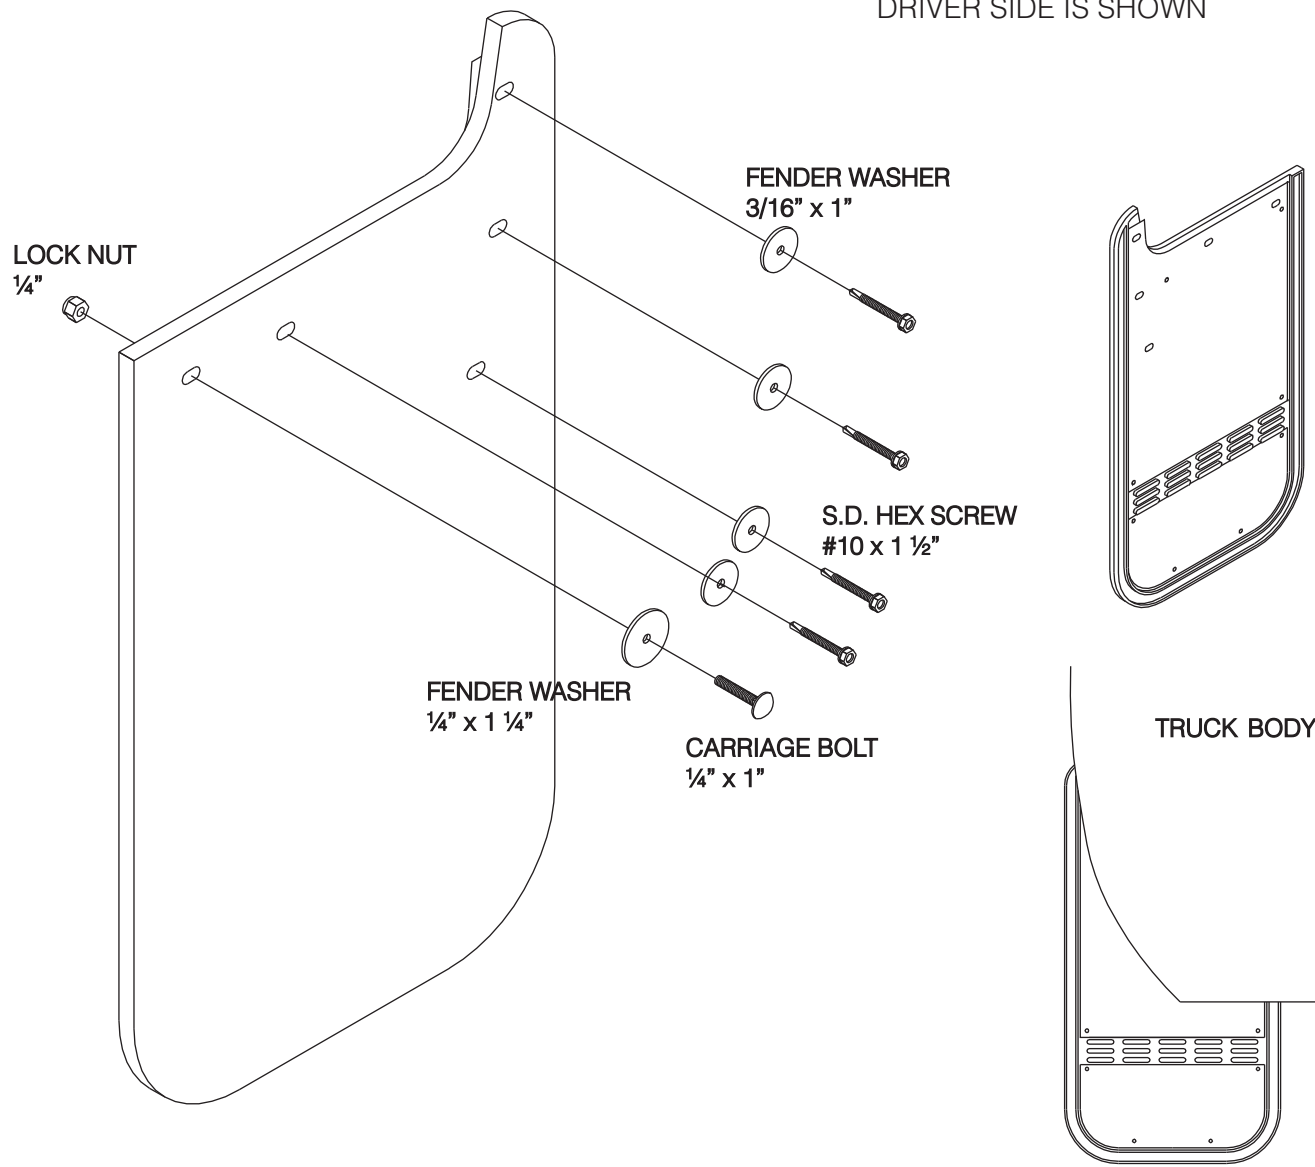

## PARTS LIST

QTY	PART DESCRIPTION
2	4006MF Mud Flaps (passenger & driver side)
8	S.D. HEX SCREWS #10 x 1 1/2"
8	FENDER WASHER 3/16" x 1"
2	CARRIAGE BOLT 1/4" x 1" N.C.
2	FENDER WASHER 1/4" x 1 1/4"
2	LOCK NUT 1/4" N.C.

Rear View of Vehicle  
(Installed Mud Flap)