



**Air Hawk**™

DESIGN REGISTERED

March 25, 2014

# PART: 2027MF

**2015 GMC 2500/3500 )**

DRIVER SIDE IS SHOWN


## INSTALLATION INSTRUCTIONS

- (1) Please check for complete hardware contents in kit according to parts list.
- (2) Remove the two 8mm factory screws, add provided washers to the factory screws, and attach mud flap to truck, do not tighten screws until all screws are and flap is lined up..
- (3) Install #12 x 1 3/8 SD Tek Screw c/w washer
- (4) Make sure that the mud flap is straight & level, tighten both factory screws & tek screws.

### IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or Mud Flaps.

Use of this product is subject to Company Terms & Conditions of sale.

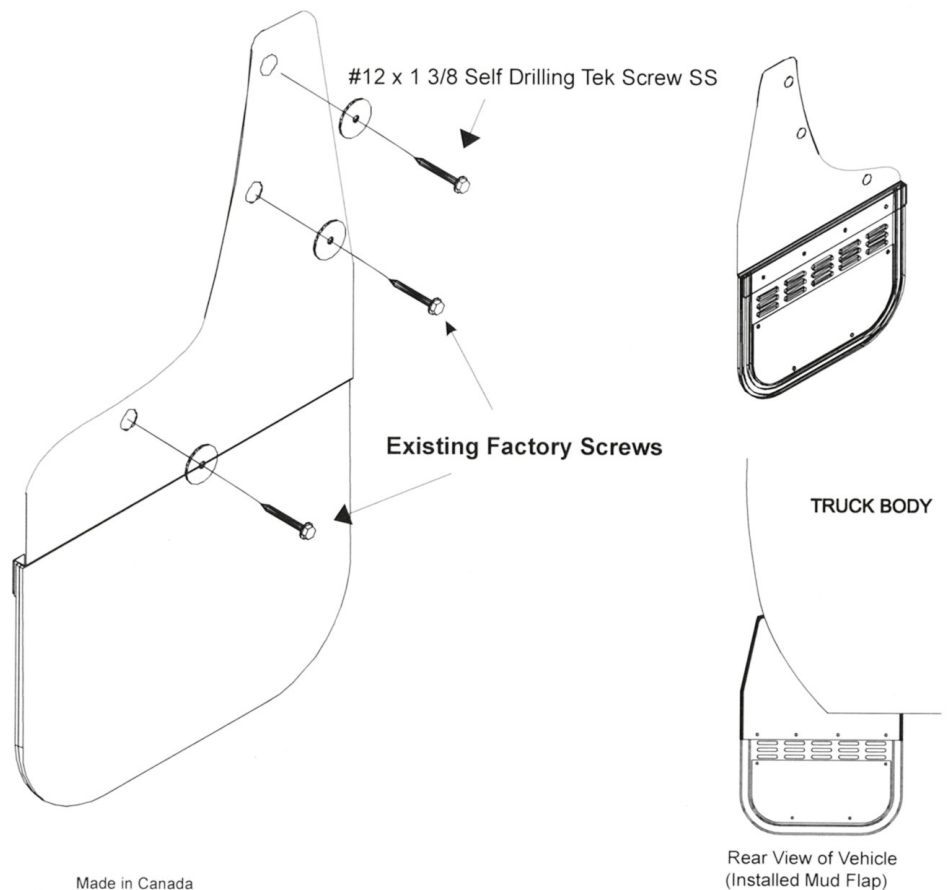

Made in Canada

PARTS LIST	
QTY	PART DESCRIPTION
2	2027MF Mud Flaps (passenger & driver side)
2	#12 x 1 3/8 Self Drilling Tek screw SS
6	#12 x 1" SS Fender Washers SS