



Air Hawk
T.M.

DESIGN REGISTERED

Part #: 3021MR

Fits 2019 Dodge Ram 1500

Installation Instructions

- (1) Ensure Truck is parked on a level surface.
- (2) Remove the 3 factory screws located at lower fender liner.
- (3) Add Stainless Steel washer to factory screws and install mud flap.
- (4) Use a 1/4" drill bit and drill holes using the square holes in mud flap as a guide through the plastic liner.
- (5) Install Carriage bolts with special backer plate as a washer and nuts provided in the square hole.

Parts List


- 2 - Mud Flaps.
- 2 - Backer Plates.
- 6 - 1/4" Fender Washers.
- 4 - 1/4" X 1" Carriage Bolts.
- 4 - 1/4" Lock Washers.
- 4 - 1/4" Hex Nuts.

Important

Manufacturer is not responsible for negligent use of vehicle or mud flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.

Use of this product is subject to Company terms and conditions of sale.

Drivers side Passenger side

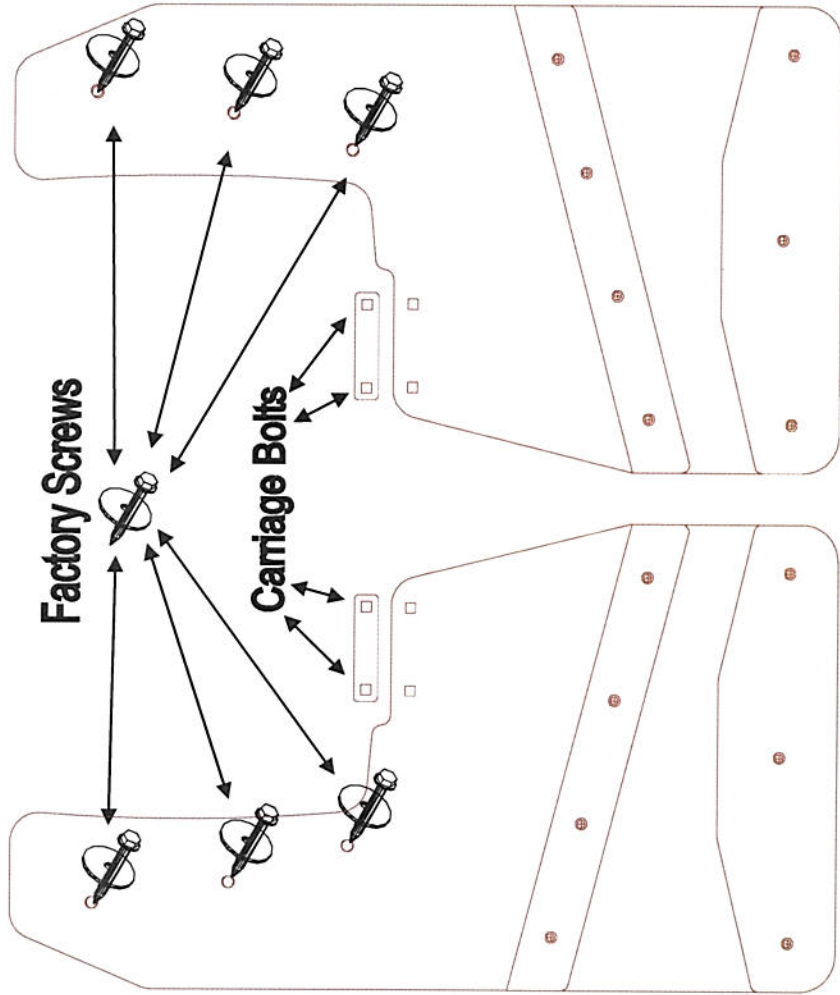

Made in Calgary Canada
Industrial Design Pending

Rear
Mud Flaps